
 



## HOW TO RE-EXTEND

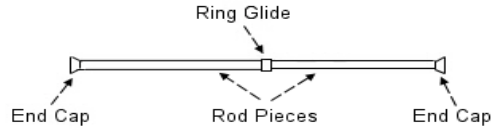

**STEP 1:**  
Remove End Caps



 **STEP 2:**  
Pull straight out DO NOT TWIST. Pull until rod is completely apart




You will have one piece with the spring attached and another piece that is a hollow tube

If the Ring Glide came off then place it FIRMLY on the end of the hollow tube (as shown above)

**STEP 3:**  
Flip the rod pieces as shown below



 The rod pieces should be positioned as shown below




**STEP 4:**  
Slide the rod pieces together (as shown below). The rod pieces MUST be in the position as describe at the end of Step 3.

**DO NOT** at any point force the spring into any opening



 **STEP 5:**  
Once you slide the rods together a small portion will be showing just beyond the Ring Glide (as shown below)




Grab the small portion of the rod piece that is showing just beyond the Ring Glide and begin to extend. Pull it STRAIGHT out. DO NOT TWIST. The spring will disappear inside

The rod will look like the picture below.



 **STEP 6:**  
Replace end caps. They are sized for a specific end of the rod.



**Your are ready for installation!**

**Please see the rod installation instructions at the top of this page.**